

State of New Jersey

CHRIS CHRISTIE

Governor

KIM GUADAGNO Lt. Governor DEPARTMENT OF ENVIRONMENTAL PROTECTION
401-02B
Bureau of Nonpoint Pollution Control
Division of Water Quality
Post Office Box 420
Trenton, New Jersey 08625-0420
609-633-7021 Fax: 609-777-0432

http://www.state.nj.us/dep/dwq/bnpc home.htm

BOB MARTIN Commissioner

August 31, 2011

Derek Berg 200 Enterprise Drive Scarborough, ME 04074

Re: MTD Field Test Certification for the Stormwater Management StormFilter by CONTECH

Construction Products, Inc.

Effective Date: September 1, 2011 Expiration Date: December 1, 2016

TSS Removal Rate: 80%

Dear Mr. Berg:

The Stormwater Management Rules at N.J.A.C. 7:8 allow the use of manufactured treatment devices (MTDs) for compliance with the design and performance standards provided that the pollutant removal rates have been verified by New Jersey Corporation for Advanced Technology, NJCAT, and certified by the New Jersey Department of Environmental Protection (NJDEP).

The certification process was revised through the "Transition for Manufactured Treatment Devices," dated July 15, 2011. NJDEP has determined that Stormwater Management StormFilter by CONTECH Construction Products, Inc. is consistent with the criteria under B. Manufactured Treatment Devices with Field Certifications. Therefore, NJDEP certifies the use of the Stormwater Management StormFilter by CONTECH Construction Products, Inc. using a perlite media with an 80% TSS removal rate, provided that the project design is consistent with the following conditions:

- 1. The various cartridge heights and associated water quality peak capacities shall be sized for the peak flow of the New Jersey Water Quality Design Storm per N.J.A.C. 7:8-5.
- 2. The peak inflow of the Water Quality Design Storm is limited to 2.05gpm/ft². The maximum inflow area per cartridge is limited to the impervious area as shown in Table 1.

Table 1

Cartridge Height (in)	12	18	27
Sediment Load Capacity @ 2gpm/ft2 (lbs)	22	34	51
Maximum Allowable Inflow			
Area (acres)	0.11	0.17	0.255

- 3. The system must be designed to ensure that the draindown time for the Water Quality Design Storm does not exceed thirty-six (36) hours.
- 4. The Stormwater Management StormFilter cartridges must provide a minimum sediment load capacity for the various cartridge heights as shown in Table 1.
- 5. The Stormwater Management StormFilter is certified as an off-line system. Any flow above the New Jersey Water Quality Design Storm must be bypassed around the system.
- 6. This certification does not extend to the enhanced removal rates under N.J.A.C. 7:8-5.5 through the addition of settling chambers (such as hydrodynamic separators) or media filtration practices (such as a sand filter).
- 7. The maintenance plan for the sites using this device shall incorporate at a minimum, the maintenance requirements for the Stormwater Management StormFilter shown attached.

In addition to the attached, any project with a Stormwater BMP subject to the Stormwater Management Rules, N.J.A.C. 7:8, must include a detailed maintenance plan. The detailed maintenance plan must include all of the items identified in Stormwater Management Rules, N.J.A.C. 7:8-5.8. Such items include, but are not limited to, the list of inspection and maintenance equipment and tools, specific corrective and preventative maintenance tasks, indication of problems in the system, and training of maintenance personnel. Additional information can be found in Chapter 8: Maintenance of the New Jersey Stormwater Best Management Manual.

NJDEP anticipates proposing further adjustments to this process through the readoption of the Stormwater Management Rules. Additional information regarding the implementation of the Stormwater Management Rules, N.J.A.C. 7:8, are available at www.njstormwater.org. If you have any questions regarding the above information, please contact Ms. Sandra Blick of my office at (609) 633-7021.


Sincerely,

Ed Frankel, P.P., Acting Bureau Chief Bureau of Nonpoint Pollution Control

C: Richard S. Magee, NJCAT Chron file



StormFilter Inspection and Maintenance Procedures

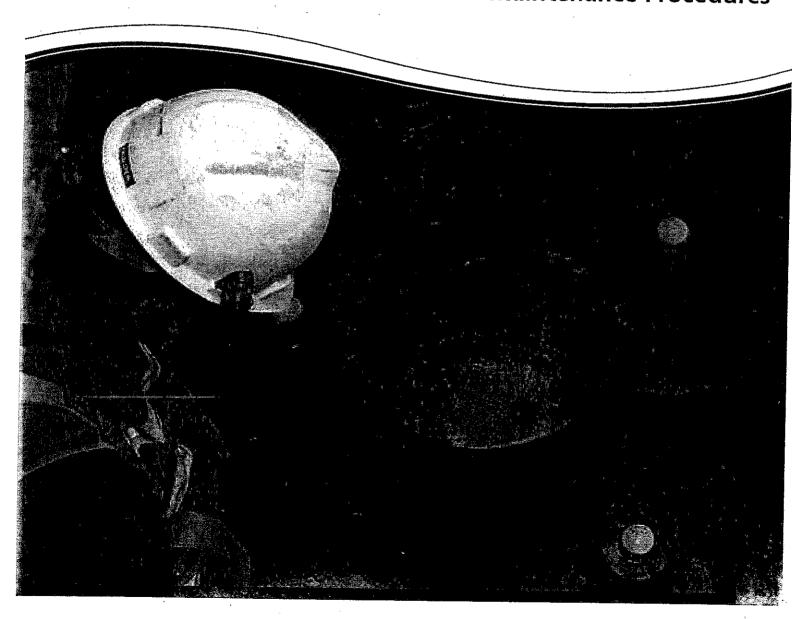



Maintenance Guidelines

The primary purpose of the Stormwater Management StormFilter® is to filter out and prevent pollutants from entering our waterways. Like any effective filtration system, periodically these pollutants must be removed to restore the StormFilter to its full efficiency and effectiveness.

Maintenance requirements and frequency are dependent on the pollutant load characteristics of each site. Maintenance activities may be required in the event of a chemical spill or due to excessive sediment loading from site erosion or extreme storms. It is a good practice to inspect the system after major storm events.

Maintenance Procedures

Although there are likely many effective maintenance options, we believe the following procedure is efficient and can be implemented using common equipment and existing maintenance protocols. A two step procedure is recommended as follows:

1. Inspection

Inspection of the vault interior to determine the need for maintenance.

2. Maintenance

Cartridge replacement

Sediment removal

Inspection and Maintenance Timing

At least one scheduled inspection should take place per year with maintenance following as warranted.

First, an inspection should be done before the winter season. During the inspection the need for maintenance should be determined and, if disposal during maintenance will be required, samples of the accumulated sediments and media should be obtained.

Second, if warranted, a maintenance (replacement of the filter cartridges and removal of accumulated sediments) should be performed during periods of dry weather.



In addition to these two activities, it is important to check the condition of the StormFilter unit after major storms for potential damage caused by high flows and for high sediment accumulation that may be caused by localized erosion in the drainage area. It may be necessary to adjust the inspection/maintenance schedule depending on the actual operating conditions encountered by the system. In general, inspection activities can be conducted at any time, and maintenance should occur, if warranted, in late summer to early fall when flows into the system are not likely to be present.

Maintenance Frequency

The primary factor controlling timing of maintenance of the StormFilter is sediment loading.

A properly functioning system will remove solids from water by trapping particulates in the porous structure of the filter media inside the cartridges. The flow through the system will naturally decrease as more and more particulates are trapped. Eventually the flow through the cartridges will be low enough to require replacement. It may be possible to extend the usable span of the cartridges by removing sediment from upstream trapping devices on a routine as-needed basis in order to prevent material from being re-suspended and discharged to the StormFilter treatment system.

Site conditions greatly influence maintenance requirements. StormFilter units located in areas with erosion or active construction may need to be inspected and maintained more often than those with fully stabilized surface conditions.

The maintenance frequency may be adjusted as additional monitoring information becomes available during the inspection program. Areas that develop known problems should be inspected more frequently than areas that demonstrate no problems, particularly after major storms. Ultimately, inspection and maintenance activities should be scheduled based on the historic records and characteristics of an individual StormFilter system or site. It is recommended that the site owner develop a database to properly manage StormFilter inspection and maintenance programs,

Prior to the development of the maintenance database, the following maintenance frequencies should be followed:

Inspection

One time per year After major storms

Maintenance

As needed, based on results of inspection (The average maintenance lifecycle is approximately 1-3 years)

Per Regulatory requirement

In the event of a chemical spill

Frequencies should be updated as required. The recommended initial frequency for inspection is one time per year. StormFilter units should be inspected after major storms.

Sediment removal and cartridge replacement on an as needed basis is recommended unless site conditions warrant.

Once an understanding of site characteristics has been established, maintenance may not be needed for one to three years, but inspection is warranted and recommended annually.

Inspection Procedures


The primary goal of an inspection is to assess the condition of the cartridges relative to the level of visual sediment loading as it relates to decreased treatment capacity. It may be desirable to conduct this inspection during a storm to observe the relative flow through the filter cartridges. If the submerged cartridges are severely plugged, then typically large amounts of sediments will be present and very little flow will be discharged from the drainage pipes. If this is the case, then maintenance is warranted and the cartridges need to be replaced.

Warning: In the case of a spill, the worker should abort inspection activities until the proper guidance is obtained. Notify the local hazard control agency and CONTECH Stormwater Solutions immediately.

To conduct an inspection:

Important: Inspection should be performed by a person who is familiar with the operation and configuration of the StormFilter treatment unit

- 1. If applicable, set up safety equipment to protect and notify surrounding vehicle and pedestrian traffic.
- 2. Visually inspect the external condition of the unit and take notes concerning defects/problems.

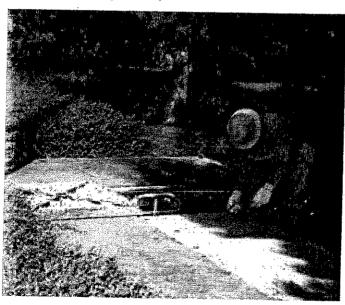


- 3. Open the access portals to the vault and allow the system vent.
- 4. Without entering the vault, visually inspect the inside of the unit, and note accumulations of liquids and solids.
- 5. Be sure to record the level of sediment build-up on the floor of the vault, in the forebay, and on top of the cartridges. If flow is occurring, note the flow of water per drainage pipe. Record all observations. Digital pictures are valuable for historical documentation.
- 6. Close and fasten the access portals.

- 7. Remove safety equipment.
- 8. If appropriate, make notes about the local drainage area relative to ongoing construction, erosion problems, or high loading of other materials to the system.
- Discuss conditions that suggest maintenance and make decision as to weather or not maintenance is needed.

Maintenance Decision Tree

The need for maintenance is typically based on results of the inspection. The following Maintenance Decision Tree should be used as a general guide. (Other factors, such as Regulatory Requirements, may need to be considered)

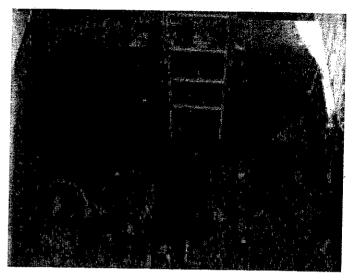

- 1. Sediment loading on the vault floor.
 - If >4" of accumulated sediment, maintenance is required.
- 2. Sediment loading on top of the cartridge.
 - a. If > 1/4" of accumulation, maintenance is required.
- 3. Submerged cartridges.
 - If >4" of static water in the cartridge bay for more that 24 hours after end of rain event, maintenance is required.
- 4. Plugged media.
 - a. If pore space between media granules is absent, maintenance is required.
- 5. Bypass condition.
 - If inspection is conducted during an average rain fall event and StormFilter remains in bypass condition (water over the internal outlet baffle wall or submerged cartridges), maintenance is required.
- 6. Hazardous material release.
 - a. If hazardous material release (automotive fluids or other) is reported, maintenance is required.
- 7. Pronounced scum line.
 - If pronounced scum line (say ≥ 1/4" thick) is present above top cap, maintenance is required.
- 8. Calendar Lifecycle.
 - a. If system has not been maintained for 3 years maintenance is required.

Assumptions

- · No rainfall for 24 hours or more
- · No upstream detention (at least not draining into StormFilter)
- · Structure is online
- · Outlet pipe is clear of obstruction
- · Construction bypass is plugged

Maintenance

Depending on the configuration of the particular system, maintenance personnel will be required to enter the vault to perform the maintenance.

Important: If vault entry is required, OSHA rules for confined space entry must be followed.

Filter cartridge replacement should occur during dry weather. It may be necessary to plug the filter inlet pipe if base flows is occurring.

Replacement cartridges can be delivered to the site or customers facility. Information concerning how to obtain the replacement cartridges is available from CONTECH Stormwater Solutions.

Warning: In the case of a spill, the maintenance personnel should abort maintenance activities until the proper guidance is obtained. Notify the local hazard control agency and CONTECH Stormwater Solutions immediately.

To conduct cartridge replacement and sediment removal maintenance:

- 1. If applicable, set up safety equipment to protect maintenance personnel and pedestrians from site hazards.
- 2. Visually inspect the external condition of the unit and take notes concerning defects/problems.
- 3. Open the doors (access portals) to the vault and allow the system to vent.
- 4. Without entering the vault, give the inside of the unit, including components, a general condition inspection.
- 5. Make notes about the external and internal condition of the vault. Give particular attention to recording the level of sediment build-up on the floor of the vault, in the forebay, and on top of the internal components.
- 6. Using appropriate equipment offload the replacement cartridges (up to 150 lbs. each) and set aside.
- 7. Remove used cartridges from the vault using one of the following methods:

Method 1:

A. This activity will require that maintenance personnel enter the vault to remove the cartridges from the under drain manifold and place them under the vault opening for lifting (removal). Unscrew (counterclockwise rotations) each filter cartridge from the underdrain connector. Roll the loose cartridge, on edge, to a convenient spot beneath the vault access.

Using appropriate hoisting equipment, attach a cable from the boom, crane, or tripod to the loose cartridge. Contact CONTECH Stormwater Solutions for suggested attachment devices.



Important: Note that cartridges containing leaf media (CSF) do not require unscrewing from their connectors. Take care not to damage the manifold connectors. This connector should remain installed in the manifold and could be capped during the maintenance activity to prevent sediments from entering the underdrain manifold:

Remove the used cartridges (up to 250 lbs. each) from the vault.

Important: Care must be used to avoid damaging the cartridges during removal and installation. The cost of repairing components damaged during maintenance will be the responsibility of the owner unless CONTECH Stormwater Solutions performs the maintenance activities and damage is not related to discharges to the system.

- Set the used cartridge aside or load onto the hauling truck.
- Continue steps a through c until all cartridges have been removed.

Method 2:

- Enter the vault using appropriate confined space protocols.
- B. Unscrew the cartridge cap.
- C. Remove the cartridge hood screws (3) hood and float.
- D. At location under structure access, tip the cartridge on its side.

- Important: Note that cartridges containing media other than the leaf media require unscrewing from their threaded connectors. Take care not to damage the manifold connectors. This connector should remain installed in the manifold and capped if necessary.
- Empty the cartridge onto the vault floor. Reassemble the empty cartridge.
- E. Set the empty, used cartridge aside or load onto the hauling truck.
- Continue steps a through e until all cartridges have been removed.



- 8. Remove accumulated sediment from the floor of the vault and from the forebay. This can most effectively be accomplished by use of a vacuum truck.
- 9. Once the sediments are removed, assess the condition of the vault and the condition of the connectors. The connectors are short sections of 2-inch schedule 40 PVC, or threaded schedule 80 PVC that should protrude about 1" above the floor of the vault. Lightly wash down the vault interior.
 - a. If desired, apply a light coating of FDA approved silicon lube to the outside of the exposed portion of the connectors. This ensures a watertight connection between the cartridge and the drainage pipe.
 - b. Replace any damaged connectors.
- Using the vacuum truck boom, crane, or tripod, lower and install the new cartridges. Once again, take care not to damage connections.

- 11. Close and fasten the door.
- 12. Remove safety equipment.
- 13. Finally, dispose of the accumulated materials in accordance with applicable regulations. Make arrangements to return the used empty cartridges to CONTECH Stormwater Solutions.





Related Maintenance Activities -

Performed on an as-needed basis

StormFilter units are often just one of many structures in a more comprehensive stormwater drainage and treatment system.

In order for maintenance of the StormFilter to be successful, it is imperative that all other components be properly maintained. The maintenance/repair of upstream facilities should be carried out prior to StormFilter maintenance activities.

In addition to considering upstream facilities, it is also important to correct any problems identified in the drainage area. Drainage area concerns may include: erosion problems, heavy oil loading, and discharges of inappropriate materials:

Material Disposal

The accumulated sediment found in stormwater treatment and conveyance systems must be handled and disposed of in accordance with regulatory protocols. It is possible for sediments: to contain measurable concentrations of heavy metals and organic chemicals (such as pesticides and petroleum products). Areas with the greatest potential for high pollutant loading include industrial areas and heavily traveled roads.

Sediments and water must be disposed of in accordance with all applicable waste disposal regulations. When scheduling maintenance, consideration must be made for the disposal of solid and liquid wastes. This typically requires coordination with a local landfill for solid waste disposal. For liquid waste disposal a number of options are available including a municipal vacuum truck decant facility, local waste water treatment plant or on-site treatment and discharge.





800.925.5240 contechstormwater.com

Support

- · Drawings and specifications are available at contechstormwater.com.
- · Site-specific design support is available from our engineers.

©2007 CONTECH Stormwater Solutions

CONTECH Construction Products Inc. provides site solutions for the civil engineering industry. CONTECH's portfolio includes bridges, drainage, sanitary sewer, stormwater and earth stabilization products. For information on other CONTECH division offerings, visit contech-cpi.com or call 800.338.1122

Nothing in this catalog should be construed as an expressed warranty or an implied warranty of merchantability or fitness for any particular purpose. See the CONTECH standard quotation or acknowledgement for applicable warranties and other terms and conditions of sale.

Inspection Report -----Personnel: Location:___ _System Size: -_____ System Type: Vault Cast-In-Place Linear Catch Basin Manhole 🗌 Other Date: Sediment Thickness in Forebay: _ Sediment Depth on Vault Floor: Structural Damage: Estimated Flow from Drainage Pipes (if available): Cartridges Submerged: Yes No Depth of Standing Water: StormFilter Maintenance Activities (check off if done and give description) Trash and Debris Removal: Minor Structural Repairs: Drainage Area Report Excessive Oil Loading: Yes 🗌 No 🗀 Sediment Accumulation on Pavement: No Source: _ Erosion of Landscaped Areas: Yes 🗍 No Source: Items Needing Further Work: _____ Owners should contact the local public works department and inquire about how the department disposes of their street waste residuals. Other Comments:

Review the condition reports from the previous inspection visits.

Date:Location: _ •					
	_System Size:				
_			Linear Catch Basin	Manhole	Other 🗌
List Safety Procedures and Equipmen	nt Used:				
		•			
		·			
System Observations					
Months in Service:	•				
Dil in Forebay:	V- []		-		
	Yes	No (
ediment Depth in Forebay:					
ediment Depth on Vault Floor: tructural Damage:	<u></u>				
rainage Area Report					-
ccessive Oil Loading:	Yes 🗍	No [Source		q
ediment Accumulation on Pavement		No [
osion of Landscaped Areas:	Yes 🗍	No [
	<u>. </u>				<u></u>
ormFilter Cartridge Replacemen	t Maintenan	ce Activi	ties		
move Trash and Debris:	Yes 🗌	No [
place Cartridges:	Yes 🗌	No [
diment Removed:	Yes 🗌	No [_		
antity of Sediment Removed (estima	rte?):				<u> </u>
nor Structural Repairs:	Yes	No [Details:		
siduals (debris, sediment) Disposal N	lethods:				
tes:					
